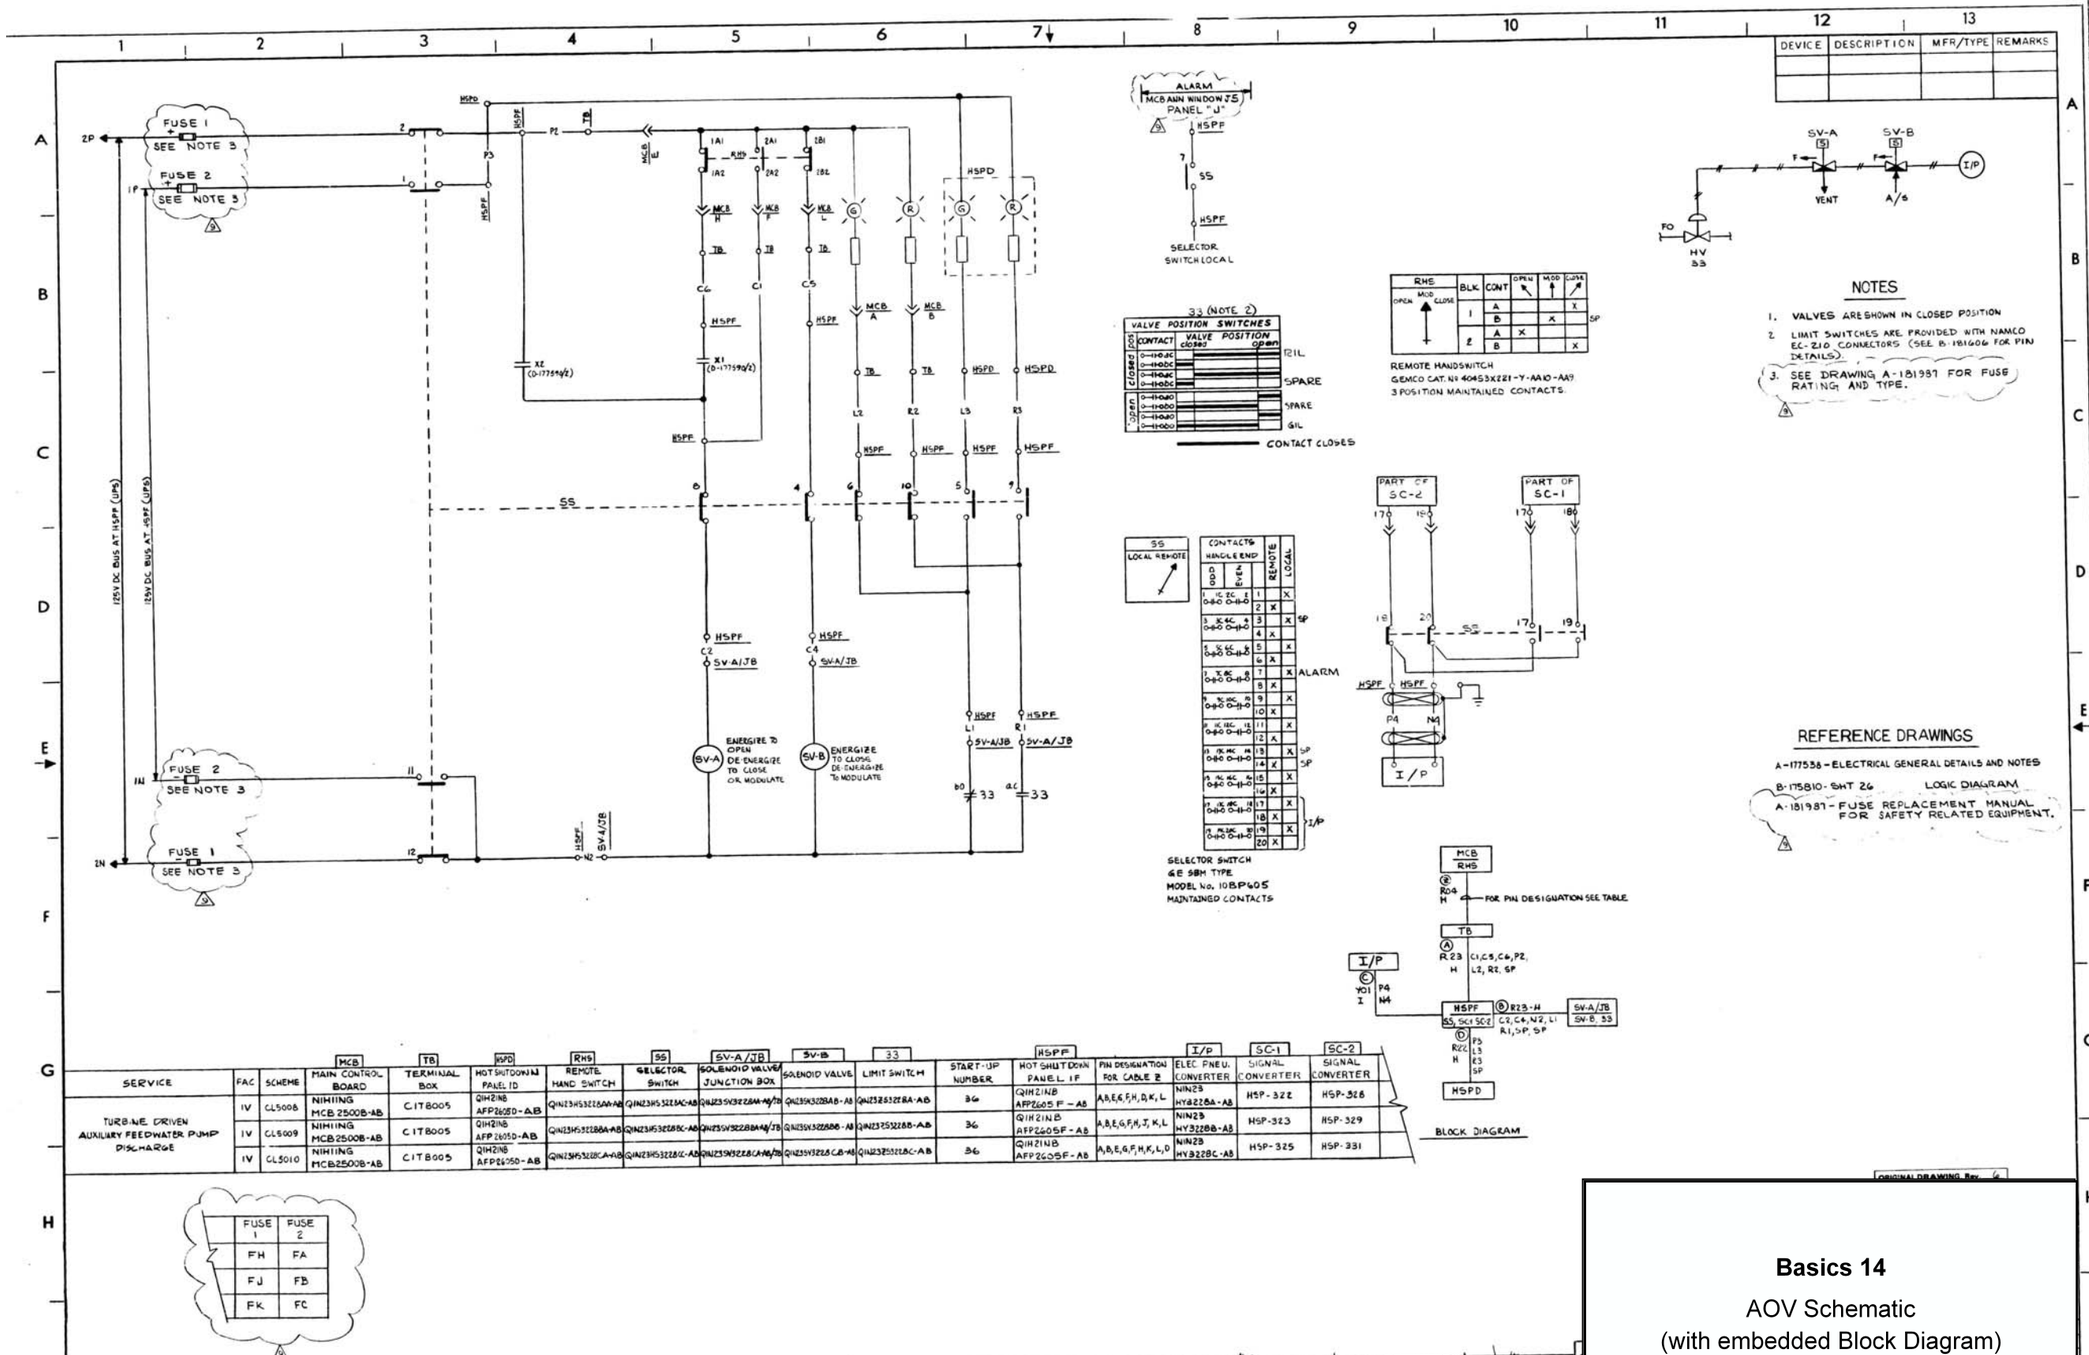

SERVICE	FAC	SCHEME	MCB MAIN CONTROL BOARD	TB TERMINAL BOX	HSPD HOT SHUTDOWN PANEL ID	RHS REMOTE HAND SWITCH	SS SELECTOR SWITCH	SV-A/JB SOLENOID VALVE JUNCTION BOX	SV-B SOLENOID VALVE	33 LIMIT SWITCH	START-UP NUMBER	HSPF HOT SHUTDOWN PANEL IP	PIN DESIGNATION FOR CABLE 2	I/P ELEC. PNEU. CONVERTER	SC-1 SIGNAL CONVERTER	SC-2 SIGNAL CONVERTER
TURBINE DRIVEN AUXILIARY FEEDWATER PUMP DISCHARGE	IV	CL5008	NIHING MCB 2500B-AB	C1T8005	QIH21NB AFP2605D-AB	QIN23H5322BAA-AB	QIN23H5322BAC-AB	QIN23SV322BAA-AB/TB	QIN23SV322BAB-AB	QIN23S322BA-AB	36	QIH21NB AFP2605F-AB	A,B,E,G,F,H,D,K,L	NIN23 HY3228A-AB	HSP-322	HSP-328
	IV	CL5009	NIHING MCB 2500B-AB	C1T8005	QIH21NB AFP2605D-AB	QIN23H5322BBA-AB	QIN23H5322BBC-AB	QIN23SV322BBA-AB/TB	QIN23SV322BBB-AB	QIN23S322BB-AB	36	QIH21NB AFP2605F-AB	A,B,E,G,F,H,J,K,L	NIN23 HY3228B-AB	HSP-323	HSP-329
	IV	CL5010	NIHING MCB2500B-AB	C1T8005	QIH21NB AFP2605D-AB	QIN23H5322BCA-AB	QIN23H5322BCC-AB	QIN23SV322BCA-AB/TB	QIN23SV322BCB-AB	QIN23S322BC-AB	36	QIH21NB AFP2605F-AB	A,B,E,G,F,H,K,L,D	NIN23 HY3228C-AB	HSP-325	HSP-331

Basics 14

AOV Schematic
(with embedded Block Diagram)